




# REMOTE CONTROL PARKING LOCK



Please read this manual carefully before operation !

## VII. Parts List

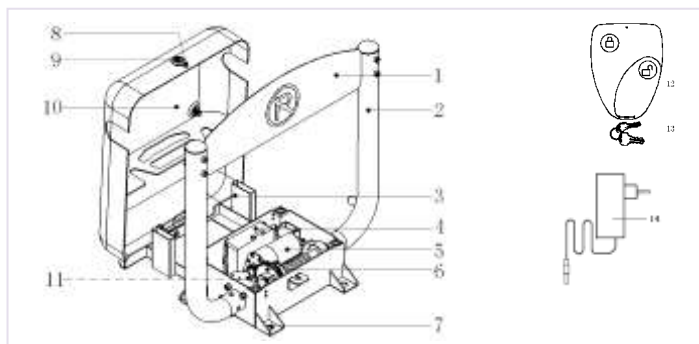

1 Indication board	5 Gear	9 Lock	13 Key
2 Rocker hand	6 Motor	10 Switch	14 Charger
3 Storage cell	7 Indicator Light	11 Fixup Foot	
4 Motor	8 Cover	12 Controller	

## III. Introduction:

Press the remote control's unlock button slightly to lower the arms then park the car to the parking lot. When the car leaves, press the lock button to rise the arms to avoid other cars occupy your private parking lot.(Chart 1,2,3)

## IV. Functions:

1. Alarm System: When accidentally hit it will alarm.
2. Crack up Prevention: If hit the arms will lower down, neither crack up the lock nor broken the car.
3. Push down Alarm: When pushed down it will alarm, then rise up after 3 seconds.
4. Jammed reaction: If the arm resist by outside force, it will lower down automatically
5. Tire scrape Prevention: Fillet edge design.
6. Strong Structure: Can afford 5 ton car run over and high compressive strength.



## I. Check the accessories

- 1、 Parking lock..... 1 set
- 2、 Controller.....2 sets
- 3、 Charger.....1 set
- 4、 Bolt.....6 pc
- 5、 Instruction.....1 pc
- 6、 Six inner wrench..... 1 pc
- 7、 Key.....2 pc

## II. Specification

- 1、 Model: AS-BW 5
- 2、 Voltage: DC 12V
- 3、 Electric current: 0.5A
- 4、 Rating power: 6W
- 5、 Battery content: DC 12V 7AH
- 5、 Charge time: 12 hours
- 6、 Distance of control: 30M
- 7、 Time of ascent and descent: 6 seconds
- 8、 Product weight: 9.2Kg
- 9、 Dimension of product: 445mm(L)×400 mm(W)×70 mm(H) descent indicate plate  
320mm(L)×400 mm(W)×420 mm(H) ascend indicate plate

## V. Installation:

1. Take out the position lock and the fixup screws from the case.
2. Install it in the centre or front of parking lot. Symbol face front.
3. Release the cover's screws then open it by key.(Chart 4)
4. Make six holes by electric drill according to the holes on the Parking lock. Dia: 12mm Depth:50mm (Chart 5)
5. Put the screw into the hole. Fix the lock with inner hexangular screw firmly..
6. Insert the battery's plug to the control's plug.(Chart 6)
7. Close the cover. Use flat screws fast the cover firmly.(Chart 7)
8. Press controller to check whether its work normally.(Chart 8)
9. Use the key to lock up the Parking Lock.



5



## VIII、 Attentions:

1. Do not install the Parking lock on the non solid ground !
2. Do not strike the parking lock hard !

## IX、 Trouble Cause and Measure

Trouble	Cause	Measure
Indicate plate ascent and descent slow and powerless	Battery low	Charge battery
Controller failure	Out of battery	Change battery
Indicate plate not straight	the limit switch shift	Adjust the block
The arms transmutation	Transmutation by hard strike	Remove the arm and fix it
<b>If the trouble can not eliminate, please contact the dealer or manufacturer</b>		

## V. Introduction for Charge

- 1、 When the power of the storage cell used up, the indicator Lighter will blink, and the buzzer will alarm. The storage cell need to charge up.
- 2、 Use the screwdriver release the cover's screws. Then Open the cover used by key. (Chart 9)
- 3、 Pull out the plug of the storage cell, take out the storage cell.(Chart 10)
- 4、 Connect the plugs of the storage cell and the charger, plug in and charge (about 12 hours ) (Chart 11)

